

## Dear Customer:

Thank you for choosing the RK61. In order to fully understand our product, please read the user guide carefully before use. And please keep this guide for future use.

## Production Introduction:

This is a backlight mechanical keyboard with 61 keys. It supports Bluetooth and wired dual mode connections to the device. It has various application designs, such as two-color keycaps, any 6 keys without conflict, brilliant color backlit, control of hardware backlit, and FN multi-function key combination.

## System Compatibility:

On wired mode, this product is compatible with Windows 2000, XP, Vista, Win7, Win8, Win10, Mac and on bluetooth mode, it is compatible with Android and IOS system devices.

### ■ Gentle Hint :

For ensuring your normal use, please charge the product before your first use.

## Indication of Function Caps Lock:

When the function caps lock is turned on, the backlit of key Caps is always on.  
When the function caps lock is turned off, the backlit is off.

## Charging Introduction:

When charging with a charger, please ensure voltage 5V and current 1A.  
You can also charge it by plugging it directly into the computer. During charging, the key Space will be on and it will be off when finishing. Full charge needs about 3 hours.

## Energy-saving:

Without operation for 1 minutes, the keyboard backlight will automatically turn off.  
Without operation for 5 minutes, the keyboard will turn into standby mode.  
Without operation for 10 minutes, it will turn into Deep Sleep mode. You can tap any key to wake the keyboard.

## Wired/Bluetooth Mode Introduction:

### **FN+TAB --- Switch Wired/Bluetooth Mode**

When the keyboard connected to the data cable, you can press the FN + Tab to switch the keyboard to use the wired mode, and press FN + Tab again to switch to wireless Bluetooth mode.

---

### **FN+ P --- Enter the pairing mode**

Firstly, ensure that the switch on the back of the keyboard is in "ON" state. Secondly, press FN + TAB to switch to Bluetooth mode. Thirdly, press FN + P (long press for 3 seconds) to enter the pairing status. The P key backlight will continue to flicker, until the Bluetooth device finishes pairing successfully (This product is displayed as MantisTek Keyboard on the device). When finishing pairing, the P key backlight will turn off.

---

### **FN+ Q,W,E --- Switch Bluetooth Device**

This keyboard can save three Bluetooth devices at the same time. You can switch among 3 Bluetooth devices which has been matched successfully by pressing FN+Q, W, E. When switching among the Bluetooth devices, the backlight will flicker continuously at a certain frequency and turns off after switching successfully. If the Bluetooth device is not saved, please press

---



## Backlight Mode Introduction:

### **FN+ \ | --- Switch Backlight Mode**

Switch cycle of 17 kinds of backlight modes (The number and effect of the backlight mode will vary depending on the version. Please refer to the actual product.)

---

### **FN+ [{ / ]} --- Control the brightness of backlight**

Press  to increase the brightness of backlight. Press  to reduce the brightness of backlight to off. There are four grades of backlight brightness and 1 grade to turn it off.

---

### **FN+ ;: / ' --- Control the speed of backlight**

Press FN+;: to increase the speed of backlight. Press FN+' to reduce the speed of backlight to off. There are four grades of backlight speed.

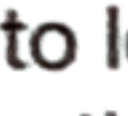
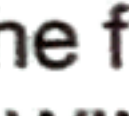
---

## Combination keys' function switching and locking




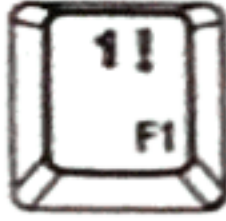 



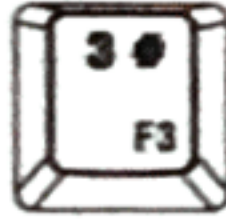 

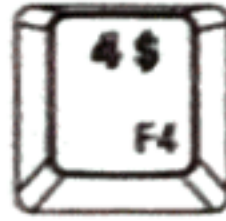 

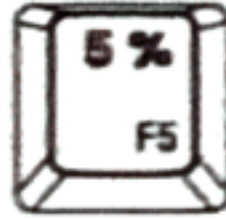 
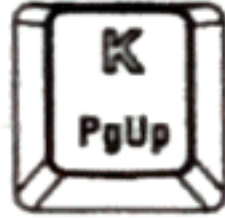 
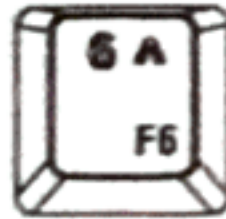 


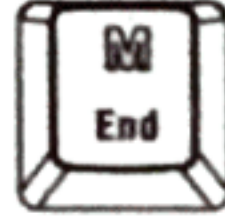 


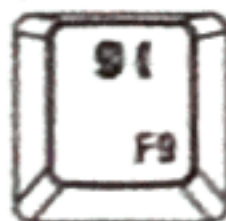 
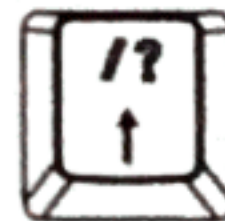 
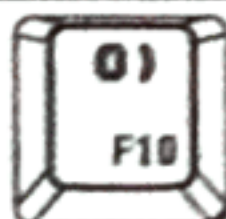 


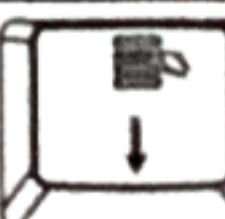 



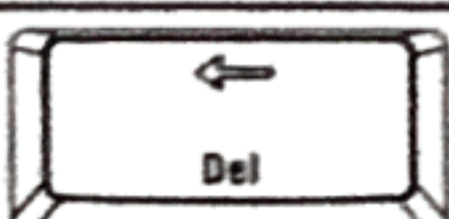 
**Press FN+Ctrl(Ctrl on the left side of the keyboard)** to switch to activating the second function of combination keys (except the arrow keys). Press FN+Ctrl again, to restore the 9 keys main function Y/U/I/H/J/K/N/M/, < , but the other combination keys still in the second function. Press FN+Ctrl third times, all the combination keys' main function recovery.

**Press FN+Shift(Shift on the right side of the keyboard),** Arrow keys turn into the second function. Press FN+Shift again, arrow keys function recovery.

## FN+ --- Win Key Locking Control

Press FN+  to lock the function of WIN key. Press FN+  again to unlock the function of WIN key.

## Other Functions of FN Key Combination

Keys	The second functions	Keys	The second functions
			PrtSC
	F1		ScrIk
	F2		Pause
	F3		Ins
	F4		Home
	F5		PgUp
	F6		Del
	F7		End
	F8		PgDn
	F9		/?
	F10		Alt
	F11		
	F12		Ctrl
	Del		



Note: In order to type “? ”, you must press FN+Shift (Shift on the left side of the keyboard) +/? at the same time.